

CODICE PRODOTTO	CATEGORIA	MODELLO	DESCRIZIONE
PRF0182412	CAPPE DA CUCINA	ADÉLE	ADÉLE BL MAT/A/60
PRF0182410	CAPPE DA CUCINA	ADÉLE	ADÉLE BL MAT/A/90
PRF0199698	CAPPE DA CUCINA	ADÉLE	ADÉLE @ BL MAT/A/60
PRF0199699	CAPPE DA CUCINA	ADÉLE	ADÉLE @ BL MAT/A/90
PRF0167314	CAPPE DA CUCINA	ADÉLE	ADÉLE BLIX/A/60
PRF0167315	CAPPE DA CUCINA	ADÉLE	ADÉLE BLIX/A/90
PRF0032793C	CAPPE DA CUCINA	BELT S	BELT BL/F/80
PRF0033852C	CAPPE DA CUCINA	BELT S	BELT IX/F/80
PRF0038443C	CAPPE DA CUCINA	BELT S	BELT WH/F/80
PRF0147266	CAPPE DA CUCINA	BIO	BIO WH/A/90 USB ROVERE
PRF0147266A	CAPPE DA CUCINA	BIO	BIO @ WH/A/90 USB ROVERE
PRF0200562	CAPPE DA CUCINA	BIO	BIO @ BLRO/A/90 USB ROVERE
PRF0164459	CAPPE DA CUCINA	BLOOM	BLOOM BL/A/85
PRF0164462	CAPPE DA CUCINA	BLOOM	BLOOM GR/A/85
PRF0164475	CAPPE DA CUCINA	BLOOM-S	BLOOM-S DEKT/A/85
PRF0164490	CAPPE DA CUCINA	BLOOM-S	BLOOM-S WH/A/85
PRF0164459A	CAPPE DA CUCINA	BLOOM	BLOOM @ BL/A/85
PRF0164462A	CAPPE DA CUCINA	BLOOM	BLOOM @ GR/A/85
PRF0164475A	CAPPE DA CUCINA	BLOOM-S	BLOOM-S DEKT/A/85
PRF0164490A	CAPPE DA CUCINA	BLOOM-S	BLOOM-S WH/A/85
PRF0147062	CAPPE DA CUCINA	CRUISE	CRUISE IX/A/60
PRF0147074	CAPPE DA CUCINA	CRUISE	CRUISE IX/A/90
PRF0194157	CAPPE DA CUCINA	ELEMENT	ELEMENT @ IXBL/A/90
PRF0196972	CAPPE DA CUCINA	ELEMENT	ELEMENT @ IXBL/A/120
PRF0194415	CAPPE DA CUCINA	ELEMENT	ELEMENT @ BL MAT/A/90
PRF0196976	CAPPE DA CUCINA	ELEMENT	ELEMENT @ BL MAT/A/120
PRF0094251B	CAPPE DA CUCINA	ELLE S	ELLE BL/F/80
PRF0097706B	CAPPE DA CUCINA	ELLE S	ELLE WH/F/80
PRF0146263	CAPPE DA CUCINA	HAIKU	HAIKU BL/A/32
PRF0146264	CAPPE DA CUCINA	HAIKU	HAIKU BL/A/60
PRF0146265	CAPPE DA CUCINA	HAIKU	HAIKU BL/A/90
PRF0146266	CAPPE DA CUCINA	HAIKU	HAIKU BL/A/120
PRF0146267	CAPPE DA CUCINA	HAIKU	HAIKU WH/A/32
PRF0146268	CAPPE DA CUCINA	HAIKU	HAIKU WH/A/60
PRF0146269	CAPPE DA CUCINA	HAIKU	HAIKU WH/A/90
PRF0146270	CAPPE DA CUCINA	HAIKU	HAIKU WH/A/120
PRF0146254	CAPPE DA CUCINA	HAIKU	HAIKU IX/A/32
PRF0146255	CAPPE DA CUCINA	HAIKU	HAIKU IX/A/60
PRF0146256	CAPPE DA CUCINA	HAIKU	HAIKU IX/A/90
PRF0146257	CAPPE DA CUCINA	HAIKU	HAIKU IX/A/120
PRF0196763	CAPPE DA CUCINA	HAIKU DRY	HAIKU DRY @ BLRO/A/60
PRF0197397	CAPPE DA CUCINA	HAIKU DRY	HAIKU DRY @ BLRO/A/90
PRF0104625A	CAPPE DA CUCINA	JOY	JOY BLIX/A/60
PRF0104626A	CAPPE DA CUCINA	JOY	JOY BLIX/A/90
PRF0104630A	CAPPE DA CUCINA	JOY	JOY WHIX/A/60
PRF0104631A	CAPPE DA CUCINA	JOY	JOY WHIX/A/90
PRF0193729	CAPPE DA CUCINA	JUST DRY	JUST DRY BL/A/55
PRF0196641	CAPPE DA CUCINA	JUST DRY	JUST DRY BL/A/80
PRF0097782A	CAPPE DA CUCINA	LOL	LOL BL/A/60
PRF0097906A	CAPPE DA CUCINA	LOL	LOL BL/A/90
PRF0097149A	CAPPE DA CUCINA	LOL	LOL IX/A/60
PRF0097323A	CAPPE DA CUCINA	LOL	LOL IX/A/90
PRF0147731	CAPPE DA CUCINA	MAJESTIC NO DRIP	MAJESTIC NO DRIP BL/A/60
PRF0147732	CAPPE DA CUCINA	MAJESTIC NO DRIP	MAJESTIC NO DRIP BL/A/90
PRF0117381A	CAPPE DA CUCINA	MAJESTIC	MAJESTIC BL/A/60
PRF0116967A	CAPPE DA CUCINA	MAJESTIC	MAJESTIC BL/A/90
PRF0124235A	CAPPE DA CUCINA	MAJESTIC	MAJESTIC WH/A/60
PRF0124236A	CAPPE DA CUCINA	MAJESTIC	MAJESTIC WH/A/90
PRF0117381B	CAPPE DA CUCINA	MAJESTIC	MAJESTIC @ BL/A/60
PRF0116967B	CAPPE DA CUCINA	MAJESTIC	MAJESTIC @ BL/A/90
PRF0124235B	CAPPE DA CUCINA	MAJESTIC	MAJESTIC @ WH/A/60
PRF0124236B	CAPPE DA CUCINA	MAJESTIC	MAJESTIC @ WH/A/90
PRF0147272	CAPPE DA CUCINA	METEORITE	METEORITE IX/A/90
PRF0147273	CAPPE DA CUCINA	METEORITE	METEORITE IX/A/120
PRF0199509	CAPPE DA CUCINA	NEAT	NEAT @ BL/A/60
PRF0199572	CAPPE DA CUCINA	NEAT	NEAT @ BL/A/80
PRF0199536	CAPPE DA CUCINA	NEAT	NEAT @ BL/A/90
PRF0199573	CAPPE DA CUCINA	NEAT	NEAT @ WH/A/60
PRF0199575	CAPPE DA CUCINA	NEAT	NEAT @ WH/A/80
PRF0199574	CAPPE DA CUCINA	NEAT	NEAT @ WH/A/90
PRF0096484	CAPPE DA CUCINA	NUAGE	NUAGE DRYWALL/F/75

PRF0098374	CAPPE DA CUCINA	NUAGE	NUAGE PAINTABLE/F/75
PRF0094744	CAPPE DA CUCINA	OM AIR	OM AIR BL/F/75
PRF0094734	CAPPE DA CUCINA	OM AIR	OM AIR WH/F/75
PRF0164946	CAPPE DA CUCINA	PLAT	PLAT BL/F/55
PRF0164874	CAPPE DA CUCINA	PLAT	PLAT BL/F/80
PRF0165707	CAPPE DA CUCINA	PLAT	PLAT WH/F/55
PRF0165712	CAPPE DA CUCINA	PLAT	PLAT WH/F/80
PRF0094744A	CAPPE DA CUCINA	OM AIR	OM AIR @ BL/F/75
PRF0094734A	CAPPE DA CUCINA	OM AIR	OM AIR @ WH/F/75
PRF0164946A	CAPPE DA CUCINA	PLAT	PLAT @ BL/F/55
PRF0164874A	CAPPE DA CUCINA	PLAT	PLAT @ BL/F/80
PRF0165707A	CAPPE DA CUCINA	PLAT	PLAT @ WH/F/55
PRF0165712A	CAPPE DA CUCINA	PLAT	PLAT @ WH/F/80
PRF0150289	CAPPE DA CUCINA	REEF	REEF IX/A/60
PRF0150288	CAPPE DA CUCINA	REEF	REEF IX/A/90
PRF0163752	CAPPE DA CUCINA	RULES	RULES BL/F/60
PRF0163751	CAPPE DA CUCINA	RULES	RULES BL/F/90
PRF0163753	CAPPE DA CUCINA	RULES	RULES BL/F/120
PRF0163752A	CAPPE DA CUCINA	RULES	RULES @ BL/F/60
PRF0163751A	CAPPE DA CUCINA	RULES	RULES @ BL/F/90
PRF0163753A	CAPPE DA CUCINA	RULES	RULES @ BL/F/120
PRF0163755	CAPPE DA CUCINA	RULES	RULES DEKT/F/60
PRF0163754	CAPPE DA CUCINA	RULES	RULES DEKT/F/90
PRF0163756	CAPPE DA CUCINA	RULES	RULES DEKT/F/120
PRF0163758	CAPPE DA CUCINA	RULES	RULES NAKED/F/60
PRF0163757	CAPPE DA CUCINA	RULES	RULES NAKED/F/90
PRF0163759	CAPPE DA CUCINA	RULES	RULES NAKED/F/120
PRF0097374A	CAPPE DA CUCINA	SPOT PLUS	SPOT PLUS LCD H6 60
PRF0097373A	CAPPE DA CUCINA	SPOT PLUS	SPOT PLUS LCD H6 90
PRF0100242A	CAPPE DA CUCINA	SPOT PLUS	SPOT PLUS LCD H6 120
PRF0147736	CAPPE DA CUCINA	SPOT URBAN	SPOT URBAN CAST IRON/A/90
PRF0147737	CAPPE DA CUCINA	SPOT URBAN	SPOT URBAN ZINC/A/90
PRF0110514B	CAPPE DA CUCINA	STRIPE	STRIPE IX/A/60
PRF0110515B	CAPPE DA CUCINA	STRIPE	STRIPE IX/A/90
PRF0101142B	CAPPE DA CUCINA	STRIPE	STRIPE BL/A/60
PRF0164806	CAPPE DA CUCINA	STRIPE	STRIPE BL/A/80
PRF0101143B	CAPPE DA CUCINA	STRIPE	STRIPE BL/A/90
PRF0101144B	CAPPE DA CUCINA	STRIPE	STRIPE WH/A/60
PRF0164805	CAPPE DA CUCINA	STRIPE	STRIPE WH/A/80
PRF0101145B	CAPPE DA CUCINA	STRIPE	STRIPE WH/A/90
PRF0199704	CAPPE DA CUCINA	STRIPE	STRIPE @ BL/A/60
PRF0199705	CAPPE DA CUCINA	STRIPE	STRIPE @ BL/A/80
PRF0199706	CAPPE DA CUCINA	STRIPE	STRIPE @ BL/A/90
PRF0199707	CAPPE DA CUCINA	STRIPE	STRIPE @ WH/A/60
PRF0199708	CAPPE DA CUCINA	STRIPE	STRIPE @ WH/A/80
PRF0199709	CAPPE DA CUCINA	STRIPE	STRIPE @ WH/A/90
PRF0147738	CAPPE DA CUCINA	STRIPE URBAN	STRIPE URBAN CAST IRON/A/90
PRF0147739	CAPPE DA CUCINA	STRIPE URBAN	STRIPE URBAN ZINC/A/90
PRF0043030A	CAPPE DA CUCINA	SWEET	SWEET WHITE/F/85
PRF0167320	CAPPE DA CUCINA	SWEET	SWEET WHITE/A/85 + CAM
PRF0043031A	CAPPE DA CUCINA	SWEET	SWEET UMBER GREY/F/85
PRF0167321	CAPPE DA CUCINA	SWEET	SWEET UMBER GREY/A/85 + CAM
PRF0043033A	CAPPE DA CUCINA	SWEET	SWEET IVORY/F/85
PRF0167322	CAPPE DA CUCINA	SWEET	SWEET IVORY/A/85 + CAM
PRF0120672A	CAPPE DA CUCINA	SWEET	SWEET RAME/F/85 COPPER
PRF0167324	CAPPE DA CUCINA	SWEET	SWEET RAME/A/85 COPPER + CAM
PRF0120689A	CAPPE DA CUCINA	SWEET	SWEET PELTROX/F/85 PELTROX
PRF0167323	CAPPE DA CUCINA	SWEET	SWEET PELTROX/A/85 PELTROX + CAM
PRF0201739	CAPPE DA CUCINA	SWEET	SWEET MOON BALCK/F/85
PRF0201740	CAPPE DA CUCINA	SWEET	SWEET MOON/A BLACK/85 + CAM
PRF0201741	CAPPE DA CUCINA	SWEET	SWEET SAGE/F/85
PRF0201742	CAPPE DA CUCINA	SWEET	SWEET SAGE/A/85 +CAM
PRF0201743	CAPPE DA CUCINA	SWEET	SWEET EMBRACE/F/85
PRF0201744	CAPPE DA CUCINA	SWEET	SWEET EMBRACE/A/85 + CAM
PRF0201745	CAPPE DA CUCINA	SWEET	SWEET TOUPE/F/85
PRF0201746	CAPPE DA CUCINA	SWEET	SWEET TOUPE/A/85 + CAM
PRF0201747	CAPPE DA CUCINA	SWEET	SWEET BRONZE/F/85
PRF0201748	CAPPE DA CUCINA	SWEET	SWEET BRONZE/A/85 + CAM
PRF0201749	CAPPE DA CUCINA	SWEET	SWEET PEACH FUZZ/F/85
PRF0201750	CAPPE DA CUCINA	SWEET	SWEET PEACH FUZZ/A/85 + CAM
PRF0120702A	CAPPE DA CUCINA	SWEET	SWEET GHISA/F/85 IRON CAST
PRF0167319	CAPPE DA CUCINA	SWEET	SWEET GHISA/A/85 IRON CAST + CAM

PRF0164980	CAPPE DA CUCINA	SUPER PLAT	SUPER PLAT BL/F/80
PRF0165017	CAPPE DA CUCINA	SUPER PLAT	SUPER PLAT GR/F/80
PRF0164980A	CAPPE DA CUCINA	SUPER PLAT	SUPER PLAT @ BL/F/80
PRF0165017A	CAPPE DA CUCINA	SUPER PLAT	SUPER PLAT @ GR/F/80
PRF0144970	CAPPE DA CUCINA	THIN	THIN IX/A/60
PRF0144969	CAPPE DA CUCINA	THIN	THIN IX/A/90
PRF0144972	CAPPE DA CUCINA	THIN	THIN IX/A/120
PRF0150292	CAPPE DA CUCINA	TRIBE	TRIBE IX/A/60
PRF0150291	CAPPE DA CUCINA	TRIBE	TRIBE IX/A/90
PRF0079553C	CAPPE DA CUCINA	VERTIGO S	VERTIGO BL/F/90
PRF0079555C	CAPPE DA CUCINA	VERTIGO S	VERTIGO BL/F/120
PRF0079554C	CAPPE DA CUCINA	VERTIGO S	VERTIGO WH/F/90
PRF0079556C	CAPPE DA CUCINA	VERTIGO S	VERTIGO WH/F/120
PRF0120352A	CAPPE DA CUCINA	EASY UX	EASY BL/F/50
PRF0120354A	CAPPE DA CUCINA	EASY UX	EASY IX/F/50
PRF0119940A	CAPPE DA CUCINA	EASY UX	EASY WH/F/50
PRF0098360	CAPPE DA CUCINA	EDITH	EDITH CLASSIC/F/50
PRF0098361	CAPPE DA CUCINA	EDITH	EDITH ROCK/F/50
PRF0098364	CAPPE DA CUCINA	EDITH	EDITH HEAVYMETAL/F/50
PRF0165082	CAPPE DA CUCINA	IKONA LIGHT	IKONA LIGHT BL MAT/F/60
PRF0165071	CAPPE DA CUCINA	IKONA LIGHT	IKONA LIGHT IX/F/60
PRF0165083	CAPPE DA CUCINA	IKONA LIGHT	IKONA LIGHT WH/F/60
PRF0164784	CAPPE DA CUCINA	IKONA	IKONA BL MAT/A/60
PRF0171195	CAPPE DA CUCINA	IKONA MAXXI PURE	IKONA MAXXI PURE BL MAT/F/120
PRF0171196	CAPPE DA CUCINA	IKONA MAXXI PURE	IKONA MAXXI PURE IX/F/120
PRF0151808	CAPPE DA CUCINA	INTERSTELLAR	INTERSTELLAR IXWH/F/65
PRF0151809	CAPPE DA CUCINA	INTERSTELLAR	INTERSTELLAR IXBL/F/65
PRF0071970D	CAPPE DA CUCINA	JUNO	JUNO BL/F/50
PRF0089651D	CAPPE DA CUCINA	JUNO	JUNO IX/F 50
PRF0071972D	CAPPE DA CUCINA	JUNO	JUNO WH/F 50
PRF0147728B	CAPPE DA CUCINA	JUNO URBAN	JUNO URBAN CAST IRON/F/50
PRF0147730B	CAPPE DA CUCINA	JUNO URBAN	JUNO URBAN ZINC/F/50
PRF0145561	CAPPE DA CUCINA	PIX	PIX WH/F/42
PRF0146220	CAPPE DA CUCINA	PIX	PIX BL/F/42
PRF0146222	CAPPE DA CUCINA	PIX	PIX CONCRETE/F/42
PRF0146221	CAPPE DA CUCINA	PIX	PIX JEANS/F/42
PRF0120528A	CAPPE DA CUCINA	SHINING	SHINING RUST/F/50
PRF0120497A	CAPPE DA CUCINA	SHINING	SHINING PELTROX/F/50
PRF0120590A	CAPPE DA CUCINA	SHINING	SHINING CAST IRON/F/50
PRF0171193	CAPPE DA CUCINA	WAVE UX	WAVE BL/F/51
PRF0171194	CAPPE DA CUCINA	WAVE UX	WAVE IX/F 51
PRF0167313	CAPPE DA CUCINA	ADÉLE ISLAND	ADÉLE IS BLIX/A/90 X 60
PRF0182415	CAPPE DA CUCINA	ADÉLE ISLAND	ADÉLE IS BL MAT/A/90 X 60
PRF0148081	CAPPE DA CUCINA	BIO ISLAND	BIO ISLAND WH/A/120x53 USB ROVERE
PRF0199702	CAPPE DA CUCINA	ADÉLE ISLAND	ADÉLE IS @ BL MAT/A/90 X 60
PRF0148081A	CAPPE DA CUCINA	BIO ISLAND	BIO ISLAND @ WH/A/120x53 USB ROVERE
PRF0200563	CAPPE DA CUCINA	BIO ISLAND	BIO ISLAND @ BLRO/A/120x53 USB ROVERE
PRF0142094A	CAPPE DA CUCINA	CLOUD SEVEN	CLOUD SEVEN IX/A/90
PRF0194158	CAPPE DA CUCINA	ELEMENT ISLAND	ELEMENT IS @ IXBL/A/120
PRF0194715	CAPPE DA CUCINA	ELEMENT ISLAND	ELEMENT IS @ BL MAT/A/120
PRF0194399	CAPPE DA CUCINA	ELEMENT ISLAND	ELEMENT IS @ IXBL/A/180
PRF0194719	CAPPE DA CUCINA	ELEMENT ISLAND	ELEMENT IS @ BL MAT/A/180
PRF0146285	CAPPE DA CUCINA	HAIKU ISLAND	HAIKU ISLAND BL/A/32
PRF0146286	CAPPE DA CUCINA	HAIKU ISLAND	HAIKU ISLAND BL/A/120
PRF0146287	CAPPE DA CUCINA	HAIKU ISLAND	HAIKU ISLAND BL/A/180
PRF0146289	CAPPE DA CUCINA	HAIKU ISLAND	HAIKU ISLAND WH/A/32
PRF0146290	CAPPE DA CUCINA	HAIKU ISLAND	HAIKU ISLAND WH/A/120
PRF0146291	CAPPE DA CUCINA	HAIKU ISLAND	HAIKU ISLAND WH/A/180
PRF0146277	CAPPE DA CUCINA	HAIKU ISLAND	HAIKU ISLAND IX/A/32
PRF0146279	CAPPE DA CUCINA	HAIKU ISLAND	HAIKU ISLAND IX/A/120
PRF0146280	CAPPE DA CUCINA	HAIKU ISLAND	HAIKU ISLAND IX/A/180
PRF0196764	CAPPE DA CUCINA	HAIKU DRY ISLAND	HAIKU ISLAND DRY @ BLRO/A/90x32
PRF0197409	CAPPE DA CUCINA	HAIKU DRY ISLAND	HAIKU ISLAND DRY @ BLRO/A/120x32
PRF0163520A	CAPPE DA CUCINA	HILIGHT-X	HILIGHT-X H30 IX/A/100
PRF0163523	CAPPE DA CUCINA	HILIGHT-X	HILIGHT-X NO MOTOR IX/A/100
PRF0167045A	CAPPE DA CUCINA	HILIGHT-X	HILIGHT-X H16 IX/A/100
PRF0173445A	CAPPE DA CUCINA	HILIGHT-X	HILIGHT-X H30 BL MAT/A/100
PRF0173443A	CAPPE DA CUCINA	HILIGHT-X	HILIGHT-X H16 BL MAT/A/100
PRF0173444A	CAPPE DA CUCINA	HILIGHT-X	HILIGHT-X H30 WH/A/100
PRF0173442A	CAPPE DA CUCINA	HILIGHT-X	HILIGHT-X H16 WH/A/100
PRF0146246A	CAPPE DA CUCINA	HILIGHT GLASS	HILIGHT GLASS H30 WH/A/100
PRF0146248	CAPPE DA CUCINA	HILIGHT GLASS	HILIGHT GALSS NO MOTOR WH/A/100

PRF0167044A	CAPPE DA CUCINA	HILIGHT GLASS	HILIGHT GLASS H16 WH/A/100
PRF0146251B	CAPPE DA CUCINA	ILLUSION	ILLUSION H30 WH/A/100
PRF0147727B	CAPPE DA CUCINA	ILLUSION	ILLUSION H16 WH/A/100
PRF0146253A	CAPPE DA CUCINA	ILLUSION	ILLUSION NO MOTOR WH/A/100
PRF0172646B	CAPPE DA CUCINA	ILLUSION	ILLUSION H30 BL MAT/A/100
PRF0172645B	CAPPE DA CUCINA	ILLUSION	ILLUSION H16 BL MAT/A/100
PRF0172647A	CAPPE DA CUCINA	ILLUSION	ILLUSION NO MOTOR BL MAT/A/100
PRF0146250B	CAPPE DA CUCINA	ILLUSION	ILLUSION H30 PAINT/A/100
PRF0147726B	CAPPE DA CUCINA	ILLUSION	ILLUSION H16 PAINT/A/100
PRF0146252A	CAPPE DA CUCINA	ILLUSION	ILLUSION NO MOTOR PAINT/A/100
PRF0104628A	CAPPE DA CUCINA	JOY ISLAND	JOY ISLAND BLIX/A/90
PRF0104629A	CAPPE DA CUCINA	JOY ISLAND	JOY ISLAND WHIX/A/90
PRF0167048	CAPPE DA CUCINA	LULLABY	LULLABY @ WH WOOD/A/120
PRF0167046	CAPPE DA CUCINA	LULLABY	LULLABY @ WOOD/A/120
PRF0148122	CAPPE DA CUCINA	METEORITE ISLAND	METEORITE ISLAND IX/A/120x60
PRF0150290	CAPPE DA CUCINA	REEF ISLAND	REEF ISLAND IX/A/90
PRF0147735B	CAPPE DA CUCINA	SKYDOME	SKYDOME H16 A/100
PRF0146232B	CAPPE DA CUCINA	SKYDOME	SKYDOME H30 A/100
PRF0146230A	CAPPE DA CUCINA	SKYDOME	SKYDOME NO MOTOR A/100
PRF0097375A	CAPPE DA CUCINA	SPOT PLUS ISLAND	SPOT PLUS ISLAND IX/A/90
PRF0150293	CAPPE DA CUCINA	TRIBE ISLAND	TRIBE ISLAND IX/A/90
PRF0144973	CAPPE DA CUCINA	THIN ISLAND	THIN ISLAND IX/A/120
PRF0183060	CAPPE DA CUCINA	ZENITH	ZENITH II IX/A/33
PRF0098375B	CAPPE DA CUCINA	YE	YE WH/A/66
PRF0162784	CAPPE DA CUCINA	GETUP	GETUP BL MAT/A/90
PRF0162866	CAPPE DA CUCINA	GETUP	GETUP CAST IRON/A/90
PRF0161680	CAPPE DA CUCINA	GETUP	GETUP IX/A/90
PRF0162869	CAPPE DA CUCINA	GETUP	GETUP NAKED/A/90
PRF0120979	CAPPE DA CUCINA	PANDORA	PANDORA BL/F/90
PRF0120980	CAPPE DA CUCINA	PANDORA	PANDORA IX/F/90
PRF0121267A	CAPPE DA CUCINA	ACUTA	ACUTA IX/F/100
PRF0127462A	CAPPE DA CUCINA	ACUTA	ACUTA BL/F/100
PRF0157712A	CAPPE DA CUCINA	BOXIN NO DRIP	BOX IN NO DRIP IX/A/60
PRF0156613A	CAPPE DA CUCINA	BOXIN NO DRIP	BOX IN NO DRIP IX/A/90
PRF0157280A	CAPPE DA CUCINA	BOXIN NO DRIP	BOX IN NO DRIP IX/A/120
PRF0211341	CAPPE DA CUCINA	BOXIN NO DRIP 2.0	BOXIN NO DRIP 2.0 VL IX/A/60
PRF0211342	CAPPE DA CUCINA	BOXIN NO DRIP 2.0	BOXIN NO DRIP 2.0 VL IX/A/90
PRF0211343	CAPPE DA CUCINA	BOXIN NO DRIP 2.0	BOXIN NO DRIP 2.0 VL IX/A/120
PRF0205572	CAPPE DA CUCINA	BOXIN NO DRIP 2.0	BOXIN NO DRIP 2.0 IX/A/60
PRF0205581	CAPPE DA CUCINA	BOXIN NO DRIP 2.0	BOXIN NO DRIP 2.0 IX/A/90
PRF0205589	CAPPE DA CUCINA	BOXIN NO DRIP 2.0	BOXIN NO DRIP 2.0 IX/A/120
PRF0208528	CAPPE DA CUCINA	BOXIN NO DRIP 2.0	BOXIN NO DRIP 2.0 BLMAT/A/60
PRF0208593	CAPPE DA CUCINA	BOXIN NO DRIP 2.0	BOXIN NO DRIP 2.0 BLMAT/A/90
PRF0208657	CAPPE DA CUCINA	BOXIN NO DRIP 2.0	BOXIN NO DRIP 2.0 BLMAT/A/120
PRF0199886	CAPPE DA CUCINA	BOXIN ADVANCE DRY	BOXIN ADVANCE DRY IX/A/60
PRF0200559	CAPPE DA CUCINA	BOXIN ADVANCE DRY	BOXIN ADVANCE DRY IX/A/75
PRF0200560	CAPPE DA CUCINA	BOXIN ADVANCE DRY	BOXIN ADVANCE DRY IX/A/90
PRF0200561	CAPPE DA CUCINA	BOXIN ADVANCE DRY	BOXIN ADVANCE DRY IX/A/120
PRF0206369	CAPPE DA CUCINA	BOXIN ADVANCE DRY	BOXIN ADV DRY @ BLMAT/A/60
PRF0207054	CAPPE DA CUCINA	BOXIN ADVANCE DRY	BOXIN ADV DRY @ BLMAT/A/75
PRF0207129	CAPPE DA CUCINA	BOXIN ADVANCE DRY	BOXIN ADV DRY @ BLMAT/A/90
PRF0207200	CAPPE DA CUCINA	BOXIN ADVANCE DRY	BOXIN ADV DRY @ BLMAT/A/120
PRF0191539	CAPPE DA CUCINA	BOXIN ADVANCE PLUS	BOXIN ADVANCE PLUS @ IX/A/60
PRF0195605	CAPPE DA CUCINA	BOXIN ADVANCE PLUS	BOXIN ADVANCE PLUS @ IX/A/75
PRF0195520	CAPPE DA CUCINA	BOXIN ADVANCE PLUS	BOXIN ADVANCE PLUS @ IX/A/90
PRF0195342	CAPPE DA CUCINA	BOXIN ADVANCE PLUS	BOXIN ADVANCE PLUS @ IX/A/120
PRF0199290	CAPPE DA CUCINA	BOXIN ADVANCE PLUS	BOXIN ADVANCE PLUS @ BL MAT/A/60
PRF0199291	CAPPE DA CUCINA	BOXIN ADVANCE PLUS	BOXIN ADVANCE PLUS @ BL MAT/A/90
PRF0199292	CAPPE DA CUCINA	BOXIN ADVANCE PLUS	BOXIN ADVANCE PLUS @ BL MAT/A/120
PRF0181274	CAPPE DA CUCINA	BOXIN DRY	BOXIN DRY IX/A/60
PRF0181828	CAPPE DA CUCINA	BOXIN DRY	BOXIN DRY IX/A/75
PRF0181068	CAPPE DA CUCINA	BOXIN DRY	BOXIN DRY IX/A/90
PRF0181338	CAPPE DA CUCINA	BOXIN DRY	BOXIN DRY IX/A/120
PRF0181274A	CAPPE DA CUCINA	BOXIN DRY	BOXIN DRY IX/A/60
PRF0181828A	CAPPE DA CUCINA	BOXIN DRY	BOXIN DRY IX/A/75
PRF0181068A	CAPPE DA CUCINA	BOXIN DRY	BOXIN DRY IX/A/90
PRF0181338A	CAPPE DA CUCINA	BOXIN DRY	BOXIN DRY IX/A/120
PRF0097795A	CAPPE DA CUCINA	BOXIN PLUS	BOX IN PLUS IXGL/A/60
PRF0097796A	CAPPE DA CUCINA	BOXIN PLUS	BOX IN PLUS IXGL/A/90
PRF0097797A	CAPPE DA CUCINA	BOXIN PLUS	BOX IN PLUS IXGL/A/120
PRF0180599	CAPPE DA CUCINA	BOXIN ADVANCE	BOXIN ADVANCE IX/A/60
PRF0181497	CAPPE DA CUCINA	BOXIN ADVANCE	BOXIN ADVANCE IX/A/90

PRF0182703	CAPPE DA CUCINA	BOXIN ADVANCE	BOXIN ADVANCE IX/A/120
PRF0180599A	CAPPE DA CUCINA	BOXIN ADVANCE	BOXIN ADVANCE @ IX/A/60
PRF0181497A	CAPPE DA CUCINA	BOXIN ADVANCE	BOXIN ADVANCE @ IX/A/90
PRF0182703A	CAPPE DA CUCINA	BOXIN ADVANCE	BOXIN ADVANCE @ IX/A/120
PRF0114762A	CAPPE DA CUCINA	BOXIN	BOXIN LX/IX/A/120
PRF0114760A	CAPPE DA CUCINA	BOXIN	BOXIN LX/IX/A/60
PRF0178649	CAPPE DA CUCINA	BOXIN	BOXIN LX/IX/A/75
PRF0114761A	CAPPE DA CUCINA	BOXIN	BOXIN LX/IX/A/90
PRF0172168	CAPPE DA CUCINA	BOXIN	BOXIN LX/BL MAT/A/120
PRF0172166	CAPPE DA CUCINA	BOXIN	BOXIN LX/BL MAT/A/60
PRF0172167	CAPPE DA CUCINA	BOXIN	BOXIN LX/BL MAT/A/90
PRF0181902	CAPPE DA CUCINA	CIAK 2.0 S	CIAK 2.0 S GR/A/60
PRF0181903	CAPPE DA CUCINA	CIAK 2.0 S	CIAK 2.0 S GR/A/90
PRF0180808	CAPPE DA CUCINA	FOLD	FOLD GR/A/52
PRF0180820	CAPPE DA CUCINA	FOLD	FOLD GR/A/72
PRF0181960	CAPPE DA CUCINA	FOLD	FOLD BL/A/52
PRF0181961	CAPPE DA CUCINA	FOLD	FOLD BL/A/72
PRF0181962	CAPPE DA CUCINA	FOLD S	FOLD S IX/A/52
PRF0181963	CAPPE DA CUCINA	FOLD S	FOLD S IX/A/72
PRF0183203	CAPPE DA CUCINA	CT35 PRO	CT35 PRO IX/A/60
PRF0183209	CAPPE DA CUCINA	CT35 PRO	CT35 PRO IX/A/90
PRF0183210	CAPPE DA CUCINA	CT35 PRO	CT35 PRO IX/A/120
PRF0183213	CAPPE DA CUCINA	CT35 PRO	CT35 PRO GME IX/A/60
PRF0183218	CAPPE DA CUCINA	CT35 PRO	CT35 PRO GME IX/A/90
PRF0183219	CAPPE DA CUCINA	CT35 PRO	CT35 PRO GME IX/A/120
PRF0139077	CAPPE DA CUCINA	ELITE 35	ELITE 35 GR/IX/A/60
PRF0139069	CAPPE DA CUCINA	ELITE 35	ELITE 35 GR/IX/A/90
PRF0142886	CAPPE DA CUCINA	ERA S	ERA S IX/A/52
PRF0142744	CAPPE DA CUCINA	ERA S	ERA S IX/A/72
PRF0197684	CAPPE DA CUCINA	ERA S	ERA S BL/A/52
PRF0197686	CAPPE DA CUCINA	ERA S	ERA S BL/A/72
PRF0109787	CAPPE DA CUCINA	GLASS OUT	GLASS OUT IX/A/60
PRF0109788	CAPPE DA CUCINA	GLASS OUT	GLASS OUT IX/A/90
PRF0092333A	CAPPE DA CUCINA	HIDDEN 2.0	HIDDEN 2.0 X/A/60
PRF0095073A	CAPPE DA CUCINA	HIDDEN 2.0	HIDDEN 2.0 IX/A/90
PRF0097676A	CAPPE DA CUCINA	HIDDEN 2.0	HIDDEN 2.0 IXGL/A/60
PRF0097708A	CAPPE DA CUCINA	HIDDEN 2.0	HIDDEN 2.0 IXGL/A/90
PRF0197740	CAPPE DA CUCINA	HIDDEN 2.0	HIDDEN 2.0 BL MAT/A/52
PRF0197747	CAPPE DA CUCINA	HIDDEN 2.0	HIDDEN 2.0 BL MAT/A/72
PRF0183971	CAPPE DA CUCINA	HIDDEN ADVANCE	HIDDEN ADVANCE @ BL MAT/A/52
PRF0184107	CAPPE DA CUCINA	HIDDEN ADVANCE	HIDDEN ADVANCE @ BL MAT/A/72
PRF0180299	CAPPE DA CUCINA	HIDDEN ADVANCE	HIDDEN ADVANCE @ IX/A/52
PRF0182867	CAPPE DA CUCINA	HIDDEN ADVANCE	HIDDEN ADVANCE @ IX/A/72
PRF0183971A	CAPPE DA CUCINA	HIDDEN ADVANCE PLUS	HIDDEN ADVANCE @ BL MAT/A/52
PRF0184107A	CAPPE DA CUCINA	HIDDEN ADVANCE PLUS	HIDDEN ADVANCE @ BL MAT/A/72
PRF0180299A	CAPPE DA CUCINA	HIDDEN ADVANCE PLUS	HIDDEN ADVANCE @ IX/A/52
PRF0182867A	CAPPE DA CUCINA	HIDDEN ADVANCE PLUS	HIDDEN ADVANCE @ IX/A/72
PRF0164361	CAPPE DA CUCINA	HIDDEN 2.0 @	HIDDEN 2.0 @ BLGL/A/60
PRF0164391	CAPPE DA CUCINA	HIDDEN 2.0 @	HIDDEN 2.0 @ BLGL/A/90
PRF0164340	CAPPE DA CUCINA	HIDDEN 2.0 @	HIDDEN 2.0 @ IX/A/60
PRF0164356	CAPPE DA CUCINA	HIDDEN 2.0 @	HIDDEN 2.0 @ IX/A/90
PRF0165830	CAPPE DA CUCINA	LANE	LANE BL/A/52
PRF0165834	CAPPE DA CUCINA	LANE	LANE BL/A/72
PRF0157369	CAPPE DA CUCINA	LANE	LANE GR/A/52
PRF0157404	CAPPE DA CUCINA	LANE	LANE GR/A/72
PRF0157333	CAPPE DA CUCINA	LANE	LANE IX/A/52
PRF0157377	CAPPE DA CUCINA	LANE	LANE IX/A/72
PRF0157357	CAPPE DA CUCINA	LANE	LANE WH/A/52
PRF0157394	CAPPE DA CUCINA	LANE	LANE WH/A/72
PRF0160153	CAPPE DA CUCINA	LEVER	LEVER IX/A/60
PRF0160152	CAPPE DA CUCINA	LEVER	LEVER IX/A/90
PRF0163362	CAPPE DA CUCINA	LEVER	LEVER IX/A/120
PRF0157763A	CAPPE DA CUCINA	BOXIN NO DRIP	BOX IN NO DRIP IX/A/60 S.I.
PRF0157767A	CAPPE DA CUCINA	BOXIN NO DRIP	BOX IN NO DRIP IX/A/90 S.I.
PRF0157771A	CAPPE DA CUCINA	BOXIN NO DRIP	BOX IN NO DRIP IX/A/120 S.I.
PRF0205576	CAPPE DA CUCINA	BOXIN NO DRIP 2.0	BOXIN NO DRIP 2.0 IX/A/60 SI
PRF0205584	CAPPE DA CUCINA	BOXIN NO DRIP 2.0	BOXIN NO DRIP 2.0 IX/A/90 SI
PRF0205592	CAPPE DA CUCINA	BOXIN NO DRIP 2.0	BOXIN NO DRIP 2.0 IX/A/120 SI
PRF0208699	CAPPE DA CUCINA	BOXIN NO DRIP 2.0	BOXIN NO DRIP 2.0 BLMAT/A/60 SI
PRF0208700	CAPPE DA CUCINA	BOXIN NO DRIP 2.0	BOXIN NO DRIP 2.0 BLMAT/A/90 SI
PRF0208701	CAPPE DA CUCINA	BOXIN NO DRIP 2.0	BOXIN NO DRIP 2.0 BLMAT/A/120 SI
PRF0181521	CAPPE DA CUCINA	BOXIN DRY	BON IN DRY X/A/60 S.I.

PRF0181520	CAPPE DA CUCINA	BOXIN DRY	BON IN DRY X/A/90 S.I.
PRF0181522	CAPPE DA CUCINA	BOXIN DRY	BON IN DRY X/A/120 S.I.
PRF0133923	CAPPE DA CUCINA	BOXIN	Boxin S LED IX/A/56,4
PRF0133928	CAPPE DA CUCINA	BOXIN	BOXIN S LED IX/A/86,4
PRF0133955	CAPPE DA CUCINA	BOXIN	Boxin S LED IX/A/116,4
PRF0134260	CAPPE DA CUCINA	BOXIN	Boxin S LED IX/F/116,4 SI
PRF0134268	CAPPE DA CUCINA	BOXIN	BOXIN S LED IX/F/86,4 SI
PRF0133451	CAPPE DA CUCINA	BOXIN	Boxin S LED IX/F/56,4 SI
PRF0191771	FORNI	VIRTUS MULTI DD	VIRTUS MULTI 60 DD BL
PRF0191770	FORNI	VIRTUS MULTI 60 TFT	VIRTUS MULTI 60 TFT BL
PRF0191768	FORNI	VIRTUS MULTI 90 TFT	VIRTUS MULTI 90 TFT BL
PRF0191771A	FORNI	VIRTUS MULTI DD	VIRTUS MULTI 60 DD BL
PRF0191770A	FORNI	VIRTUS MULTI 60 TFT	VIRTUS MULTI 60 TFT BL
PRF0191768A	FORNI	VIRTUS MULTI 90 TFT	VIRTUS MULTI 90 TFT BL
PRF0199718	FORNI	VIRTUS MULTI PYRO TFT	VIRTUS MULTI 60 TFT PYRO BL
PRF0195920	LHOV	LHOV	LHOV COMBISTEAM BL/A/90
PRF0120975B	PIANO COTTURA	NIKOLATESLA ONE HP	NIKOLATESLA HP BL/A/83
PRF0120976B	PIANO COTTURA	NIKOLATESLA ONE HP	NIKOLATESLA HP BL/F/83
PRF0196322	PIANO COTTURA	NIKOLATESLA ONE HP	NIKOLATESLA ONE HP EVO BL/A/83
PRF0200577	PIANO COTTURA	NIKOLATESLA ONE HP RAW	NIKOLATESLA ONE HP EVO RAW BR/A/83
PRF0120977A	PIANO COTTURA	NIKOLATESLA ONE	NIKOLATESLA BL/A/83
PRF0120978A	PIANO COTTURA	NIKOLATESLA ONE	NIKOLATESLA BL/F/83
PRF0196318	PIANO COTTURA	NIKOLATESLA ONE	NIKOLATESLA ONE EVO BL/A/83
PRF0203698	PIANO COTTURA	NIKOLATESLA ONE RAW	NIKOLATESLA ONE EVO RAW BR/A/83
PRF0185060	PIANO COTTURA	NIKOLATESLA PRIME S	NIKOLATESLA PRIME S BL/F PO/83
PRF0185059	PIANO COTTURA	NIKOLATESLA PRIME S	NIKOLATESLA PRIME S BL/A P/83
PRF0182325	PIANO COTTURA	NIKOLATESLA PRIME S+	NIKOLATESLA PRIME S + BL/A/783
PRF0184019	PIANO COTTURA	NIKOLATESLA UNPLUGGED	NIKOLATESLA UNPLUGGED BL/F/90
PRF0184546	PIANO COTTURA	NIKOLATESLA UNPLUGGED	NIKOLATESLA UNPLUGGED BL/A/90
PRF0196324	PIANO COTTURA	NIKOLATESLA UNPLUGGED	NIKOLATESLA UNPLUGGED EVO BL/A/90
PRF0200580	PIANO COTTURA	NIKOLATESLA UNPLUGGED RA	NIKOLATESLA UNPLUGGED RAW BR/A/90
PRF0184545	PIANO COTTURA	NIKOLATESLA UNPLUGGED	NIKOLATESLA UNPLUGGED BLIX/F/90
PRF0184547	PIANO COTTURA	NIKOLATESLA UNPLUGGED	NIKOLATESLA UNPLUGGED BLIX/A/90
PRF0196326	PIANO COTTURA	NIKOLATESLA UNPLUGGED	NIKOLATESLA UNPLUGGED EVO BLIX/A/90
PRF0183878	PIANO COTTURA	NIKOLATESLA SWITCH GLOW	NIKOLATESLA SWITCH GLOW BL/F/83
PRF0183880	PIANO COTTURA	NIKOLATESLA SWITCH GLOW	NIKOLATESLA SWITCH GLOW BL/A/83
PRF0196335	PIANO COTTURA	NIKOLATESLA SWITCH GLOW	NIKOLATESLA SWITCH GLOW EVO BL/A/83
PRF0200583	PIANO COTTURA	NIKOLATESLA SWITCH GLOW F	NIKOLATESLA SWITCH GLOW RAW BR/A/83
PRF0146210A	PIANO COTTURA	NIKOLATESLA SWITCH	NIKOLATESLA SWITCH BL/F/83
PRF0146212A	PIANO COTTURA	NIKOLATESLA SWITCH	NIKOLATESLA SWITCH BL/A/83
PRF0196328	PIANO COTTURA	NIKOLATESLA SWITCH	NIKOLATESLA SWITCH EVO BL/A/83
PRF0146213A	PIANO COTTURA	NIKOLATESLA SWITCH	NIKOLATESLA SWITCH WH/F/83
PRF0146216A	PIANO COTTURA	NIKOLATESLA SWITCH	NIKOLATESLA SWITCH WH/A/83
PRF0196330	PIANO COTTURA	NIKOLATESLA SWITCH	NIKOLATESLA SWITCH EVO WH/A/83
PRF0147745A	PIANO COTTURA	NIKOLATESLA LIBRA	NIKOLATESLA LIBRA BL/F/83
PRF0147744A	PIANO COTTURA	NIKOLATESLA LIBRA	NIKOLATESLA LIBRA BL/A/83
PRF0196340	PIANO COTTURA	NIKOLATESLA LIBRA	NIKOLATESLA LIBRA EVO BL/A/83
PRF0147775A	PIANO COTTURA	NIKOLATESLA LIBRA	NIKOLATESLA LIBRA WH/F/83
PRF0147774A	PIANO COTTURA	NIKOLATESLA LIBRA	NIKOLATESLA LIBRA WH/A/83
PRF0196339	PIANO COTTURA	NIKOLATESLA LIBRA	NIKOLATESLA LIBRA EVO WH/A/83
PRF0179476	PIANO COTTURA	NIKOLATESLA FIT XL	NIKOLATESLA FIT XL BL/A/83
PRF0167054	PIANO COTTURA	NIKOLATESLA FIT	NIKOLATESLA FIT BL/A/72
PRF0167053	PIANO COTTURA	NIKOLATESLA FIT	NIKOLATESLA FIT BL/A/60
PRF0202499	PIANO COTTURA	NIKOLATESLA FIT XL RAW	NIKOLATESLA FIT XL RAW BR/A/83
PRF0202501	PIANO COTTURA	NIKOLATESLA FIT RAW	NIKOLATESLA FIT RAW BR/A/72
PRF0203695	PIANO COTTURA	NIKOLATESLA FIT RAW	NIKOLATESLA FIT RAW BR/A/60
PRF0147743A	PIANO COTTURA	NIKOLATESLA FLAME	NIKOLATESLA FLAME GR/F/88
PRF0147742A	PIANO COTTURA	NIKOLATESLA FLAME	NIKOLATESLA FLAME GR/A/88
PRF0196343	PIANO COTTURA	NIKOLATESLA FLAME	NIKOLATESLA FLAME EVO GR/A/88
PRF0147741A	PIANO COTTURA	NIKOLATESLA FLAME	NIKOLATESLA FLAME BL/F/88
PRF0147740A	PIANO COTTURA	NIKOLATESLA FLAME	NIKOLATESLA FLAME BL/A/88
PRF0196341	PIANO COTTURA	NIKOLATESLA FLAME	NIKOLATESLA FLAME EVO BL/A/88
PRF0184551	PIANO COTTURA	NIKOLATESLA FIT 3Z	NIKOLATESLA FIT 3Z BL/A/72
PRF0184526	PIANO COTTURA	NIKOLATESLA FIT 3Z	NIKOLATESLA FIT 3Z BL/A/60
PRF0183127	PIANO COTTURA	NIKOLATESLA ALPHA	NIKOLATESLA ALPHA BL/A/78
PRF0193270	PIANO COTTURA	NIKOLATESLA ALPHA B	NIKOLATESLA ALPHA B BL/A/78
PRF0196211	PIANO COTTURA	NIKOLATESLA ALPHA B	NIKOLATESLA ALPHA B BL/A/60
PRF0196872	PIANO COTTURA	NIKOLATESLA VELVET	NIKOLATESLA VELVET BL/A/83
PRF0196870	PIANO COTTURA	NIKOLATESLA VELVET	NIKOLATESLA VELVET BL/A/72
PRF0196869	PIANO COTTURA	NIKOLATESLA VELVET	NIKOLATESLA VELVET BL/A/60
PRF0183865	PIANO COTTURA	RATIO 302 PLUS	RATIO 302 PLUS BL
PRF0183894	PIANO COTTURA	RATIO 603	RATIO 603 BL

PRF0185680	PIANO COTTURA	RATIO 604	RATIO 604 BL
PRF0183903	PIANO COTTURA	RATIO 604 PLUS	RATIO 604 PLUS BL
PRF0183912	PIANO COTTURA	RATIO 804 PLUS	RATIO 804 PLUS BL
PRF0183917	PIANO COTTURA	RATIO 874 PLUS	RATIO 874 SLIM BL
PRF0199858	PIANO COTTURA	PRIMIS 302	PRIMIS 302 BL
PRF0199859	PIANO COTTURA	PRIMIS 604	PRIMIS 604 BL
PRF0199860	PIANO COTTURA	PRIMIS 603	PRIMIS 603 BL
PRF0199861	PIANO COTTURA	PRIMIS 604 PLUS	PRIMIS 604 PLUS
PRF0199862	PIANO COTTURA	PRIMIS 804 PLUS	PRIMIS 804 PLUS BL
PRF0199850	PIANO COTTURA	RATIO CONNEX 302 PLUS	RATIO 302 PLUS CONNECT BL
PRF0199854	PIANO COTTURA	RATIO CONNEX 603 PLUS	RATIO 603 PLUS CONNECT BL
PRF0199851	PIANO COTTURA	RATIO CONNEX 604 PLUS	RATIO 604 PLUS CONNECT BL
PRF0199855	PIANO COTTURA	RATIO CONNEX 804 PLUS	RATIO 804 PLUS CONNECT BL
PRF0199856	PIANO COTTURA	RATIO CONNEX 803 PLUS	RATIO 803 PLUS CONNECT BL